


# Front panel

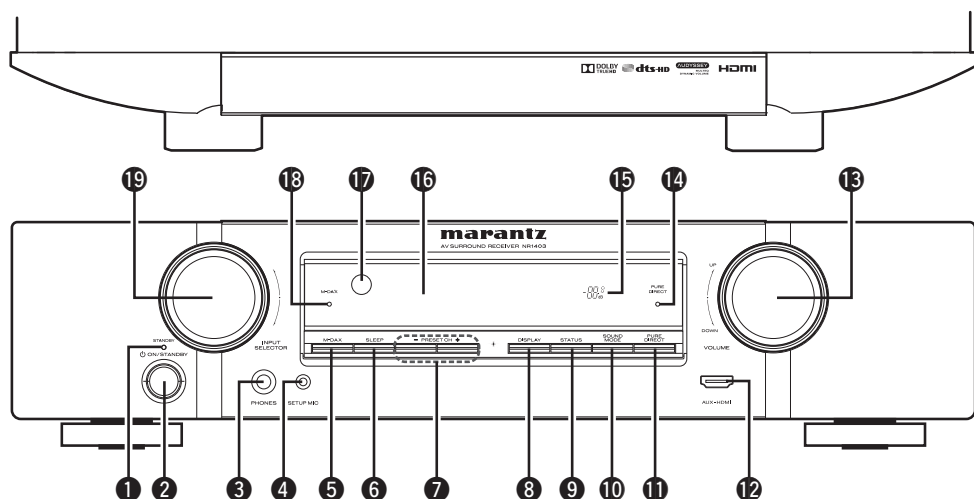

- |  |                           |
|--|---------------------------|
| ① STANDBY indicator                                | ⑪ PURE DIRECT button      |
| ② Power operation button (⏻ ON/STANDBY)            | ⑫ AUX-HDMI connector      |
| ③ Headphones jack (PHONES)                         | ⑬ VOLUME knob             |
| ④ SETUP MIC jack                                   | ⑭ PURE DIRECT indicator   |
| ⑤ M-DAX button                                     | ⑮ Master volume indicator |
| ⑥ SLEEP button                                     | ⑯ Display                 |
| ⑦ Tuner preset channel buttons<br>(PRESET CH +, -) | ⑰ Remote control sensor   |
| ⑧ DISPLAY button                                   | ⑱ M-DAX indicator         |
| ⑨ STATUS button                                    |                           |
| ⑩ SOUND MODE button                                |                           |